

User Manual



Coffee machine

1800S

English

01.01.001

Congratulations on the purchase of your WMF coffee machine.

The WMF 1800 S coffee machine is a fully automatic single cup machine for espresso, café crème, cappuccino, milk coffee, latte macchiato, foamed milk and hot water. Options include steam dispensing and the preparation of hot Choc beverages, with two different types of Choc (Twin Choc).

Each beverage is freshly brewed at the press of a button which guarantees a high quality beverage. User guidance is provided by a graphical touch-screen display on the coffee machine.

Please be sure to follow the instructions in the Software ▸ Settings ▸ Water Hardness and Capacity chapter, and to make the necessary settings.



Please read the User Manual prior to using the coffee machine.

Ensure that the staff has access to the User Manual.

Important.

Chapter 1 Introduction

Follow the User Manual Signs and Symbols.

Observe Safety chapter.

Observe the additional instructions:

Cleaning instructions 1800 S



In the event of failure to comply with maintenance information (▸ Maintenance), no liability is accepted for any resultant damage.

Similarly all guarantee/warranty obligations cease to apply in such cases.

Chapter 1	Introduction	6
1.1	Parts of the coffee machine	6
	User Manual Signs and Symbols	8
	Glossary	9
Chapter 2	Operation	10
2.1	Switch on coffee machine	10
2.2	Dispensing beverages	10
2.3	Milk or milk foam (optional)	10
2.3.1	Dispense milk or milk foam	10
2.3.2	Connect up the milk	11
	With WMF Cooler, WMF Cup&Cool (optional)	11
	Standard	11
2.4	Height adjustment of the combi spout	12
2.5	Bean hopper/product hopper	12
2.6	Twin Topping hopper/Twin Choc hopper (optional)	12
2.7	Manual insert (optional)/tablet insert	13
2.8	Grounds container	14
2.9	Grounds disposal through the counter (optional)	14
2.10	Drip tray	15
2.11	Switch off the coffee machine	15
Chapter 3	Software	16
3.1	An overview	16
3.2	Ready to operate	18
3.2.1	"Warm rinse" pad (optional)	18
3.2.2	Barista pad (optional)	18
3.2.3	Information	18
	Service	18
	Customer	18
	Brew time	19
	Journal	19
	Timer	19
3.2.4	To the main menu	19
3.3	Main menu	20
3.3.1	Milk and foam	20
	Milk foam quality	20
	Latte macchiato pause interval	20
3.3.2	Timer program	21
	Timer state	21
	Set timer	21
	Copy day	22
	Timer overview	22
	Delete timer	23
	Timer information	23
3.3.3	Care	24
	Cleaning program	24
	Foamer cleaning	24
	Mixer rinsing	25
	Filter change	25
	Rinse filter	25
	Customer Check-up (optional)	25


Table of Contents

3.3.4	Settings	26
	Recipe and buttons	26
	Selecting the beverage buttons when setting	
	Adjust values	
	Start a preparation test with the current values	
	Save setting	
	Cup volumes	
	Change recipes	
	Button allocation	
	Select grinder for a coffee beverage	
	Select the portioner for the Choc beverage	
	Weigh grounds	
	Boiler temperature	28
	Reset	28
	Time and date	29
	Display language	29
	Display contrast	29
	Water filter is fitted	29
	Water hardness	29
	Capacity	29
	Warm-up rinsing	29
	Foamer rinsing (optional)	30
	Rinsing interval	30
	Operating options	30
	Illumination (optional)	31
	Milk (optional)	32
3.3.5	PIN-entry	32
3.3.6	PIN rights, access control	32
	Cleaning level	32
	Setting level	33
	Accounting level	33
	Delete PIN	34
3.3.7	Accounting numbers of beverages	34
Chapter 4	Other settings	35
4.1	Mechanical settings	35
4.1.1	Set grinding degree	35
4.2	Labelling of beverage buttons	35
Chapter 5	Care	36
5.1	Daily cleaning	37
	For all cleaning instructions	37
5.1.1	Cleaning program	37
5.1.2	Milk system cleaning	37
	Foamer cleaning, standard	37
	Foamer cleaning Plug&Clean	38
5.1.3	Mixer rinsing	38
5.1.4	Combi spout cleaning	38
5.1.5	Milk container cleaning	38
5.1.6	General cleaning	38

5.2	Weekly cleaning	39
5.2.1	Cleaning the brewing unit	39
5.2.2	Choc/Topping mixer cleaning (optional)	41
5.3	Regular cleaning	42
5.3.1	Bean hopper cleaning	42
5.3.2	Product hopper cleaning (optional).	42
5.4	Filter change	43
Chapter 6	HACCP schedule	44
Chapter 7	Maintenance	46
7.1	Coffee machine maintenance	46
7.2	WMF Service	47
Chapter 8	Messages and instructions	48
8.1	Messages for operation	48
8.2	Error messages and malfunctions	51
8.3	Errors without error message	54
Chapter 9	Safety	55
9.1	Hazards to the operator	55
9.2	Hazards to the coffee machine	56
9.3	Intended use	57
9.4	Directives	57
9.5	Duties of the owner/operator	58
9.6	Warranty claims	59
	No warranty is provided:	59
Appendix:	Cleaning instructions (Standard)	60
Appendix:	Technical data	61
	Technical data for coffee machine	61
	Conditions for usage and installation	61
Appendix:	Accessories and spare parts	64
Index		66




Chapter 1 Introduction

1.1 Parts of the coffee machine

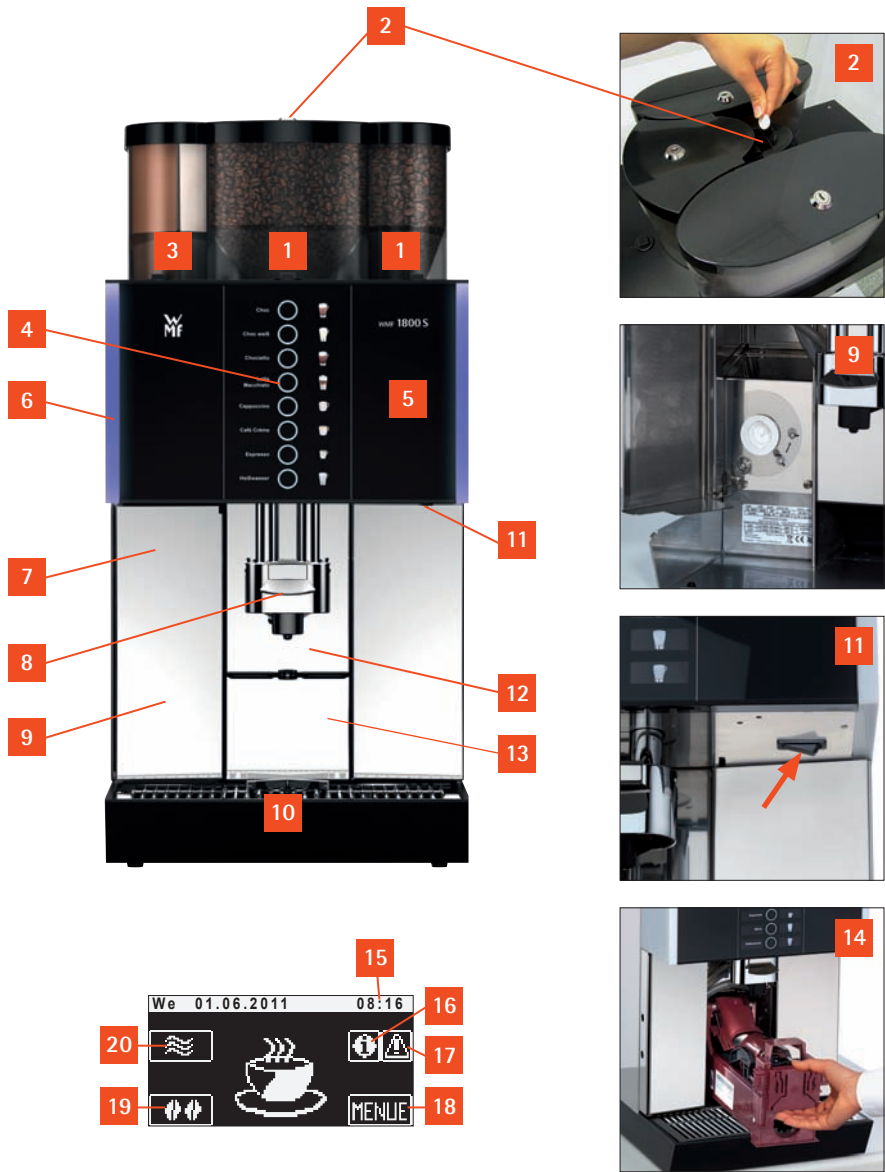

- 1 Bean hopper (optional 1 or 2)
- 2 Tablet insert (depending on the model)
- 3 Choc hopper/Topping hopper/Twin Topping hopper/Twin Choc hopper (optional)
- 4 Beverage buttons
- 5 Touch-screen display
- 6 Side illumination
- 7 Left machine door
- 8 Height-adjustable combi spout with integrated milk foamer
- 9 Plug&Clean connection (optional)
- 10 Removable drip tray with drip grid
- 11 On/Off switch
- 12 Adjustable screen
- 13 Grounds container
- 14 Brewing unit
- 15 Timer and clock display
- 16 Info pad
- 17 Messages/error messages
- 18 Menu pad (opens main menu)
- 19 Barista pad (optional)
- 20 "Warm rinse" pad (optional)

User Manual Signs and Symbols

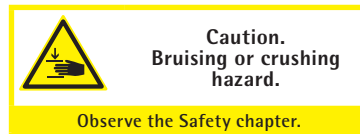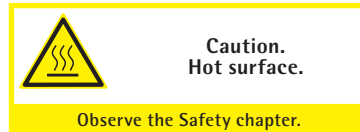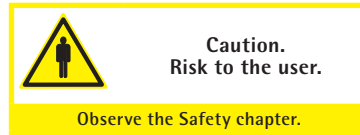

Tip
Instructions



Cross reference



Start position
Main menu

If the menu symbol is shown in this User Manual, the description starts at the main menu start position.

Call up the main menu


* Touch the unlit display for longer than 5 seconds

The "Ready to operate" display is activated and illuminated.

* Touch the **MENUE** menu pad

The main menu is displayed.

There are other display options ▷ Main menu.

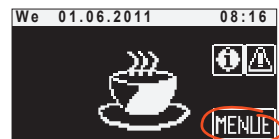

Display with menu pad



Main menu

Glossary

Term	Explanation
•	• Listings, selection options
※	※ Individual steps
<i>Text in italics</i>	<i>Description of coffee machine state and/or explanations of automatic steps.</i>
Beverage dispensing	Dispensing coffee, hot water or Choc beverages
Capacity	For example the capacity of the water filter in litres of water it can filter
Carbonate hardness	Quoted in gpg (°dKH). The water hardness is a measure of the calcium dissolved in the water.
Choc	Hot chocolate
Grounds chute	See grounds disposal through counter, chapter 2.9
Main tap	Water stop cock, angle valve
Milk system	Combi spout, milk nozzle and milk hose
Mixer system	Complete module, mixer with portion controller for Choc/Topping
O-rings	Seals
Preinfusion	Prior to brewing, coffee is briefly infused in order to ensure a more intense release of its aromatic substances.
Pressing	Automatic pressing of coffee grounds prior to brewing.
Rinsing	Intermediate cleaning
Self-service	Self-service customer operation
Topping	Milk powder
Twin Topping	Divided hopper for two kinds of powder, such as Choc and Topping

Chapter 2 Operation

2.1 Switch on coffee machine

- ※ Press On/Off switch for longer than 5 seconds

Coffee machine switches on and heats up.

When the coffee machine is ready to dispense beverages, the beverage buttons light up.

PIN access control

▷ Software

▷ Settings

▷ Operating options
page 32

▷ Timer program
page 21

If vending machine is connected

▷ User Manual of vending
machine.

2.2 Dispensing beverages

Pressing the beverage button triggers dispensing of the beverage selected.

- Lit up button = ready to dispense
- Flashing button = beverage dispensing
- Unlit button = not ready to dispense/
button disabled

- ※ Place a suitably sized cup below the combi spout

- ※ Press the desired beverage button

The desired beverage is dispensed.



Caution.
Hot liquids in the
dispensing area.

Observe the Safety chapter.



Button allocation

▷ Software ▷ Settings

▷ Recipe and buttons
page 26

2.3 Milk or milk foam (optional)

2.3.1 Dispense milk or milk foam

- ※ Press the beverage button assigned to milk or milk foam

Dispensing occurs. Dispensing runs for as long as the button is held.

2.3.2 Connect up the milk

Use a suitable milk nozzle on the combi spout.

Milk nozzle

- for cooled milk green
- for uncooled milk white

With WMF Cooler, WMF Cup&Cool (optional)

- * Insert the milk nozzle for cooled milk into the milk connection on the combi spout
- * Pull the milk container out of the cooler
- * Push the lid of the milk container back
- * Pour milk into the milk container
- * Place the lid back on the container
- * Insert the adapter on the milk hose into the connection in the milk container lid
- * Push the milk container back in carefully

The milk hose is inserted into the adapter.

Standard

- * Insert the suitable milk nozzle into the milk connection on the combi spout
- * Open the milk packaging and place on the left next to the coffee machine
- * Open the milk cover
- * Insert the milk hose through the opening
- * Insert the milk hose with the beige milk nozzle into the milk pack

The hose must not be under tension or bent when adjusting the height of the combi spout.

- * Close milk cover



Caution.
Health hazard.

Follow the HACCP schedule.



Cooler milk container



Cooler adapter



Version without cooler

2.4 Height adjustment of the combi spout

The combi spout height is adjustable.

※ Take hold of the spout from the front and push to the desired height

Height adjustment range of the combi spout:
70 mm-180 mm



2.5 Bean hopper/product hopper

If possible, replenish product hopper in advance.

Fill the hoppers no more than the amount needed for one day, in order to maintain the freshness of the products.

*Coffee beans into bean hopper,
choc powder into
choc hopper,
topping powder into
Topping hopper.*

2.6 Twin Topping hopper/ Twin Choc hopper (optional)

Divided hopper for two kinds of powder, such as Choc and Topping, or two different types of Choc.

- Left side: Choc; right side: Topping, or
- Left side: Choc 1; right side: Choc 2



2.7 Manual insert (optional)/tablet insert

Coffee machines with three product hoppers have only a tablet insert. Ground coffee must not be inserted into the tablet insert.

The manual/tablet insert is located in the centre of the coffee machine cover.

Tablet insert is used:

- for inserting cleaning tablets

Manual insert is used:


- for inserting cleaning tablets
- when using an additional coffee variety, such as decaffeinated coffee
- for a coffee trial

Add coffee grounds or cleaning tablet only when display shows a message.

Preparation of coffee grounds using the manual insert

- * Open manual insert lid
- * Insert coffee grounds (max. 16 g)
- * Close manual insert lid
- * Press the desired beverage button

For beverages on level two, touch the toggle pad before opening the manual insert lid.



Tablet insert



Manual insert

2.8 Grounds container

The coffee grounds container receives the used coffee grounds.

It has enough capacity to store coffee grounds from approx. 50 brewing cycles.

The machine will inform you when the grounds container needs emptying.


Beverage dispensing is blocked for as long as the grounds container is removed.

- * Push combi spout all the way up
- * Push up adjustable screen over coffee grounds container
- * Pull out grounds container
- * Empty and replace grounds container
- * Confirm process on the display




Clean daily
▷ *Care*

If coffee grounds container cannot be replaced, check chute for coffee residues and remove.



Always empty grounds container before reinserting. Replacing without emptying results in the coffee grounds container being overfilled. The coffee machine will be soiled. This may cause subsequent damage to the machine.



2.9 Grounds disposal through the counter (optional)

The coffee machine can be fitted with through-counter coffee grounds disposal. In this case, both the coffee grounds container and the coffee machine base have an opening that passes through the counter on which the machine is placed. The spent coffee grounds are collected in a large container under the counter.



Through-counter feature cannot be retrofitted.

Clean coffee grounds chute daily
▷ *Care*
page 36

2.10 Drip tray

- * Carefully pull out the drip tray for cleaning



Replace carefully so that no water accidentally drips down.

Clean drip tray daily ▷ Care



Caution.
Hot liquids.
Move the drip tray
carefully.

Observe the Safety chapter.

2.11 Switch off the coffee machine

The coffee machine must be cleaned daily prior to switching it off.

- * Press On/Off switch for longer than 5 seconds until coffee machine switches off
- * Turn off mains water supply

If this is not observed, the warranty is invalidated in the event of any resultant damage.



PIN access control

▷ *Software*

▷ *Settings*

▷ *Operating options*

page 32



Follow the manual.

Observe the Safety chapter.

Chapter 3 Software

3.1 An overview

Ready to operate (if display is activated)



✱ Touch the unlit display for longer than 5 seconds
The "Ready to operate" display is activated and illuminated.



There are various options for the "ready to operate" display.

Other display options ▷ Settings ▷ Operating options.



If there are errors, the relevant  pad is displayed.
If Cleaning , Descaling  or Filter change are required, this is displayed.

"Ready to operate" display pads

Chapter 3.2



"Warm rinse" pad (optional)

Chapter 3.2.1



Barista pad
(strength of the coffee) (optional)

Chapter 3.2.2



Menu pad

Chapter 3.2.5



Information

Chapter 3.2.3



Error message

Touching the pad calls up the error message.



Care message

Touching the pad leads directly to the menu.

Cleaning required.

Self-service and
operating options
▷ Settings
page 30

Main menu functions (pads)

Chapter 3.3

	Milk and foam <i>Chapter 3.3.1</i>
	Timer program <i>Chapter 3.3.2</i>
	Care <i>Chapter 3.3.3</i>
	Settings <i>Chapter 3.3.4</i>
	PIN entry <i>Chapter 3.3.5</i>
	PIN rights, access control <i>Chapter 3.3.6</i>
	Accounting <i>Chapter 3.3.7</i>

Menu control pads

	Save settings
	Start or confirm a step
	Back to the higher menu level Cancel/leave without saving (Exit)
	Clear or reset
	Start preparation test/coffee trial
	Increase or reduce setting values
	Forward or back one step in listings

3.2 Ready to operate

3.2.1 "Warm rinse" pad (optional)

※ Touch the "warm rinse" pad 

A rinse of the pipes with hot water begins. The water warms the brewing system and guarantees an optimum coffee temperature.

Recommended after a longer brewing pause, especially before dispensing a cup of espresso.

*"Warm rinse" pad (active/inactive)
▷ Settings ▷ Operating options
page 30*

3.2.2 Barista pad (optional)

※ Touch the Barista pad 

The coffee strength will be altered for the next brew only.



weaker (-15%)



normal, as per setting



stronger (+15%)

*Barista pad (active/inactive)
▷ Settings ▷ Operating options
page 30*


3.2.3 Information

※ Touch the  pad on the "ready to operate" display
The Information menu appears.

The main "Information" menu contains the following selection options:

Service

- Service location (contact details)
- Start-up data
- Next maintenance date
- Software version
- Serial number

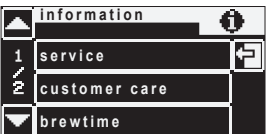

Customer


- Journal
 - Journal log of last cleaning
- Cleaning information
 - Info on last cleaning
- Descaling information
 - Info on last/next descaling
- Water filter information (optional)
 - Remaining capacity info

Brew time

- Brew and dispensing time of last beverage dispensed

Journal

- List of logged error and status messages (for telephone support)

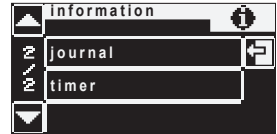

Timer

- Display the timer status (On/Off)
- Display the next switching time

3.2.4 To the main menu


Call up the main menu

* Touch the unlit display for longer than 5 seconds
The "Ready to operate" display is activated and illuminated.

* Touch the **MENUE** menu pad
The main menu is displayed.



"Ready to operate" display

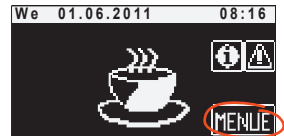


... with additional pads

Delayed fade-in

*▷ Settings ▷ Operating options
 page 30*



3.3 Main menu



MENUE

Other illustrations of the main menu for protected levels.

▷ PIN rights, access control page 32

3.3.1 Milk and foam

Milk foam quality

The milk foam quality is set here.
This setting will apply to all beverages with milk foam.
Compensates for variations in milk characteristics.

Reduce setting value -> finer foam and lower
dispensing temperature

Increase setting value -> coarser foam and higher
dispensing temperature

MENUE

MENUE

foam quality

Latte macchiato pause interval

Latte macchiato is more successful if the interval between
milk and milk foam dispensing is lengthened.

Reduce setting value -> shorter interval

Increase setting value -> longer interval

MENUE

macch.interrupt

3.3.2 Timer program

The timer program sets the switch on and switch off times. The "Timer Program" main menu contains the following selection options:

- Timer state
- Set timer
- Timer overview
- Delete timer
- Timer information

Timer state

* Touch the **timer status** pad
Activate/deactivate timer = On/Off



PIN rights, access control
▷ Software
▷ Settings
▷ PIN rights, access control
page 32



When the timer is activated, the timer symbol, a little clock, appears on the display.

Set timer

* Touch the **timer adjustment** pad
Program the switch on and switch off times.

* Touch the **operating time** pad
The operating time display appears. Here the day, time, and desired operation are set.



* Set day (Day)

- 1 = Monday
- 2 = Tuesday, etc. up to 7 = Sunday
- 1-5 = Monday to Friday (weekdays)
- 1-7 = entire week (Monday to Sunday)

* Set the time (hours, minutes)

* Set the desired switching time (action)

- Switch on time = **I** (on display)
- Switch off time = **O** (on display)

* Confirm with **OK**

or

* Delete with **C**

Example:



In day 1-5 or day 1-7, the switching times are copied to the indicated days.

*Select desired settings with the pads **+** and **-**.*

Current selection is inversely displayed.



Display programmed switching times

* Touch the **+** and **-** pads under **prg**

Programmed switching times are displayed here.

Up to 16 switching times (events) per day can be programmed.

Programmed times are listed chronologically.

*Any new switching time is sorted chronologically immediately upon input and confirmation with **OK**.*

Touching the **oi** pad directly accesses the timer overview.

Copy day

Any day may be copied to other days, complete with its switching times.

* Touch the **timer adjustment** pad

Program the switch on and switch off times.

* Touch the **operating time** pad

* Touch the number pad under **day**

The selection of the week days is displayed.

* Scroll through to page 4

* Touch the **copy day** pad

The selection of the week days is displayed again.

* Select the day that you want to copy

* Touch the **insert day** pad

Select the day you want to copy the time settings to

The day is copied.

In day 1-5 or day 1-7, the switching times are copied to the indicated days.

The individual days 1,2,3...7 are displayed.



To check times
▷ Timer overview

Timer overview


Checking the programmed switching times:

* Touch the **timer overview** pad

The switching times overview for the week is displayed graphically. Switch on times are indicated by bars.



Example:

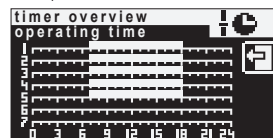

Switching times Monday to Friday (1-5).

On time 7 a.m. (7:00)

Off time 6 p.m. (18:00)

Delete timer

* Touch **delete timer** on page 2 of the timer main program menu

* Scroll to desired day and touch to select
A security dialogue now appears querying whether deletion is actually intended.

* Confirm with **OK**

The day is deleted with all its switching times.


Besides individual days, "all workdays" or the entire week can also be deleted.



This process cannot be undone.

Timer information

Touching the **timer info** pad calls up a display with the next switching time and the timer state (On/Off).

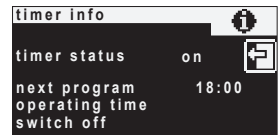



3.3.3 Care

Cleaning and descaling programs are started from the Care main menu. Filter change (optional) and maintenance actions are confirmed here.

The "Care" main menu contains the following selection options:

- Cleaning program
- Foamer cleaning
- Mixer rinsing
- Filter change
- Rinse filter



In the Software chapter ▷ Care display-guided sequences are described in detail.

Physical cleaning actions are described in the Care chapter.

Cleaning program

※ Touch the **cleaning prog.** pad

The daily cleaning program starts.

The program automatically executes foamer cleaning if milk beverages have been dispensed. Mixer rinsing follows for the WMF 1800 with mixer system.

The cleaning program sequence is described in the cleaning instructions.

Prior to carrying out cleaning, please note the safety instructions in the safety chapter. Read the cleaning instructions and the Care chapter, starting on page 36.



Caution.
Follow the manual.

Observe the Safety chapter.

Foamer cleaning

※ Touch the **foamer cleaning** pad

Foamer cleaning starts.

Optional Plug&Clean cleaning.

Foamer cleaning is carried out automatically as an integral part of the full cleaning program.



▷ Cleaning program



Caution.
Hot liquids in the
dispensing area.

Observe the Safety chapter.



Mixer rinsing

The mixer lift must be in the top position.

- * Touch the **mixer rinsing** pad
Mixer rinsing starts.

Mixer rinsing is performed automatically by the cleaning program when a mixer system is installed.



Caution.
Hot liquids in the
dispensing area.

Observe the Safety chapter.

Filter change

If the filter capacity is exceeded, there will be a message once per day that a filter change is due.
The filter must be changed within one week; otherwise, the message will be displayed after every brew.

- * Change filter
- * Confirm filter change

After filter change there is an automatic program sequence to rinse and bleed the anti-scale filter and water system. Hot water runs out of the hot water spout during this process.



Observe water filter instructions.

Displays lead step by step through the program.

Follow the instructions.



Caution.
Scalding hazard.

Observe the Safety chapter.

Rinse filter

The Filter rinse option enables water system and filter rinsing and bleeding following long intervals in operation.

- * Touch the **filter rinsing** pad

Hot water runs out of the hot water spout during this process.



Caution.
Scalding hazard.

Observe the Safety chapter.

Customer Check-up (optional)

This point can be selected by trained personnel if the WMF Service function has been enabled.

Question: Has customer check-up been performed?
yes/no



3.3.4 Settings

Recipe and buttons

※ Touch the **recipes/button** pad

Menu **recipes/button** shows the options:

- Cup volumes
- Change recipes
- Button allocation
- Weigh grounds

Selecting the beverage buttons when setting

※ Press the desired beverage button

Adjust values


※ Adjust values with the **+** and **=** pads

Start a preparation test with the current values

※ Touch the **T_{EST}** pad
The values are not saved yet.

Save setting

※ Save with **OK**

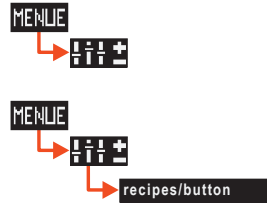

+ = more

= = less

↩ = exit without change

OK = save the values

T_{EST} = start test

Cup volumes

Cup volumes are matched to the cups used.
Individual beverage ingredients are matched to the new cup volumes with no effect on composition and quality.

Change recipes

All beverages



Coffee grounds quantity/Choc powder quantity



Water volume

Milk beverages



Milk foam volume



Milk volume

Coffee beverages



Quality

The five available quality levels affect the coffee brew.
The higher the quality level, the more intensive the release of the flavour and aromatic substances in the coffee.

Quality 1 After pressing, space is provided for the coffee grounds to swell.

Quality 2 After pressing, the coffee is brewed immediately.


Quality 3 After pressing, a pre-infusion occurs.

Quality 4 After pressing and a pre-infusion, a second wet pressing occurs.

Quality 5 After pressing, a pre-infusion occurs.
In addition the brew time is automatically extended.



Change recipes display

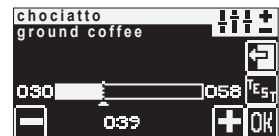

Example: Coffee grounds quantity



Quality



Caution.

An excessively high quality level may lead to a brewing water error.



Button allocation

The beverages are assigned to the beverage buttons.

This button allocation is set here.

- * Press the beverage button
- * Select the desired recipe, for example espresso, from the list

Load a new recipe:

the previous settings will be overwritten by the factory standard values for the new recipe.

Only adjustable recipes are indicated.

Select grinder for a coffee beverage

(only for 2 grinders)

- * Press the beverage button
- * Select recipe, for example espresso
- * Select grinder (on the right or left)



The portioner cannot be selected for the Chociatto beverage.

Select the portioner for the Choc beverage

(only for Twin Choc)

- * Press the beverage button
- * Select recipe, for example milk Choc 1
- * Select portioner (on the right or left)

Weigh grounds

- * Empty and replace grounds container
- * Touch the **weigh grounds** pad

The process dispenses coffee grounds directly into the grounds container and the grounds may then be weighed.

The grind quantity is dispensed once.



Boiler temperature

- * Set desired boiler temperature
(Change brewing water temperature)

(Standard range of settings 80°-100 °C)



Reset

The coffee machine software is restarted.





Time and date

Clock time and date are set here.



Display language

Language used in the display is set here.



Display contrast

Contrast of the display is set here.

(Default value is 70)



Water filter is fitted

Whether water filter is fitted or not is entered here.

This affects the descaling intervals.



Water hardness

The water hardness (carbonate hardness) is set here.



Capacity

Water filter capacity is set here.

The water filter capacity can be found in the water filter documentation.



Warm-up rinsing

Whether the coffee machine should rinse out the brewing unit with hot water after heating up is set here.

Recommended setting: active.





Foamer rinsing (optional)

Whether automatic foamer rinsing should occur after the last beverage with milk components is dispensed.

yes/no



Rinsing interval

The time elapsed between the last time a beverage with milk in it was dispensed and a foamer rinsing.

Recommended setting: 2 minutes.



Operating options

The following operating options are available.

- "Warm rinse" pad (active/inactive)
- Barista pad (active/inactive)
- 2nd Level (active/inactive)
- On/Off switch (direct/via PIN)
- Cancel beverage (yes/no)
- Menu pad (immediate/delayed)
- Error message (normal/symbol)



*If customers serve themselves then some functions can be switched to inactive.
The pads will not be shown on the "ready to operate" display.*

"Warm rinse" pad (optional)

Standard: inactive.

Barista pad

Standard: inactive.

2nd level/toggle pad

Can only be set by WMF Service upon request.

ON/OFF switch

Recommendation for self-service: via PIN.

If "via PIN" is set, then the PIN for the cleaning level will be queried before switching on or off.

▷ PIN rights, access control
page 32

Cancel beverage

Standard: no.

Menu pad

Recommendation for self-service: delayed.

If "delayed" is set, the menu pad will only be shown if the display is pressed for 5 seconds.

Standard: delayed.

▷ To the main menu
page 20

Error number

Normal: all messages are shown on the display.

Symbol: Messages that require immediate action are shown on the display.

All other messages are displayed as symbol

* Touch the symbol

All messages are displayed.



With illumination (optional):
messages that require immediate
action are accompanied by
flashing side illumination.

Display for SB mode (self-service)

Default setting for the coffee machine is self-service mode.

- It is not possible to interrupt the beverage dispensing cycle
- Menu pad is no longer displayed
- Error message Symbol
- Barista pad and "warm rinse" pad not displayed (optional)



Individual options can be changed
under the "Operating options"
menu item.

Self-service mode messages


- Beans empty
- Milk empty (cooler milk container)
- Grounds container full
- Grounds container missing
- Manual insert open
- Clean machine
- Open water supply valve
- Brewing unit error
- Error message with error number

Illumination (optional)

* Set the colour values here of the LEDs for the desired illumination colour



Setting examples	red	green	blue
light sequence (sequence of colours)	1	0	0
amber	25	30	0
blue	0	0	30

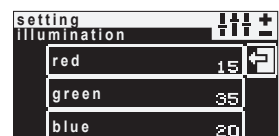

Milk (optional)

The empty milk message can be activated here.

※ Touch the  pad



Beverage lockout yes/no

Beverage lockout: no

Beverages can be dispensed until the milk container is actually empty.

Beverage lockout: yes

Input is requested as to how many beverages can be dispensed after the message has appeared. After this number of beverages has been dispensed, beverages with milk are blocked from further dispensing. Beverage lockout is removed when the milk container is filled.

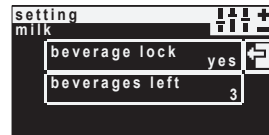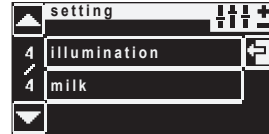

3.3.5 PIN-entry

Individual authorisation levels can be protected using a PIN. For access to a PIN-protected level, the PIN must be entered via  pad.

※ Touch the  pad in the main menu

Numerical keyboard display appears.

※ Enter required 4-figure PIN

※ Confirm with 

Following entry of a valid PIN, the assigned functions are available.



PIN-entry display

3.3.6 PIN rights, access control

If a PIN has been assigned for a particular level, no access will be granted without a PIN.

Cleaning level

On entering the valid PIN, access to:

 = Care

 = PIN-protected On/Off switch




Cleaning level access

Setting level

On entering the valid PIN, access to:

-  = Setting the milk foam quality
-  = Timer program
-  = Care
-  = PIN-protected On/Off switch
-  = Settings (only cup volumes)

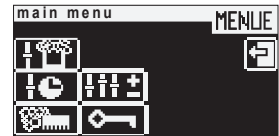


Setting level access


Accounting level

On entering the valid PIN, access to:

-  = Setting the milk foam quality
-  = Timer program
-  = Care
-  = PIN-protected On/Off switch
-  = Settings (beverage, general, others)
-  = Assign PIN rights, access control
-  = Accounting numbers of beverages

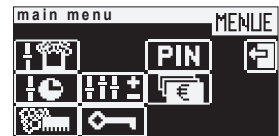

Accounting level access

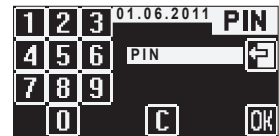

PIN-entry display

A PIN may be assigned to any level. The levels are hierarchical.

Example: The PIN for the **setting** level is valid for **cleaning** and **setting** levels, but not for the **accounting** level.

- * Touch the **PIN** pad in the main menu
- * Select desired level

Example: **cleaning**


Numerical keyboard display appears.

- * Enter any desired 4-digit number
- Number entered is displayed.*

- * Confirm with **OK**

This level is now PIN-protected.


Example:

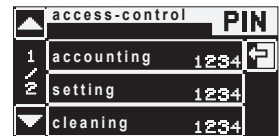

PIN entry for Cleaning level: 1234

This PIN is carried over to the higher levels.

Example:

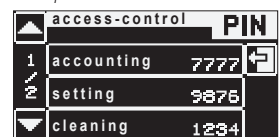

PIN entry for

Cleaning level: 1234

Setting level: 9876

Accounting level: 7777

When a PIN is assigned to a subordinate level, that PIN is automatically copied to higher levels if the latter are not already PIN-protected.

Delete PIN

Entering 0000 will delete access control for the given level. Deletion of one level automatically deletes the subordinate levels.

3.3.7 Accounting numbers of beverages

- * Touch the **counter** pad

The counter menu displays the counter for each beverage.

Read counter

- * Touch desired beverage on the display

Delete counter

- * Touch the clear pad 

If no beverage is selected, on touching the clear pad  a dialogue appears in the display querying whether the counter readings for all beverages should be zeroed.

The "Accounting numbers of beverages" function should be protected with a PIN to prevent unauthorised access.



Chapter 4 Other settings

4.1 Mechanical settings

4.1.1 Set grinding degree

- * Remove bean hoppers
Preset grinding degree is now visible.
- * Release coffee dispensing and wait until grinder starts up
- * With grinder running, alter grinding degree as desired on the side of the machine using the multitool

Grinding degree 1 → fine 

Grinding degree 6 → coarse 



Multitool



Display grinding degree

Bruising or crushing hazard.

Never reach into the grinder mechanism with coffee machine running and product hoppers removed.



Caution.
Bruising or crushing
hazard.

Observe the Safety chapter.

4.2 Labelling of beverage buttons

First switch off coffee machine in order not to trigger dispensing inadvertently.

- * Pull out existing labelling behind front glass in a downward direction
- * Write on label stickers as desired using the WMF template
- * Stick on label mount and re-insert behind the front glass panel

The template can be printed out on adhesive labels or paper.

Stick paper to label mount using an adhesive sticker.



Free download of WMF label
template from
www.servicecenter.wmf.com

Matching adhesive labels:
Zweckform-Avery No. 3659

Chapter 5 Care

Regular cleaning is essential in order to ensure problem-free operation of the coffee machine and to ensure optimum coffee quality.

Prior to and after every instance that the machine is shut off for several days, perform all cleanings.

If this is not observed, the warranty is invalidated in the event of any resultant damage.



Caution.
Health hazard.
Follow the HACCP schedule.



Follow the manual.
Observe the Safety chapter.

Cleaning intervals overview

Care					
Daily	Weekly	Regularly	Message	Optional	
x				0	Foamer rinsing
x					Cleaning program
x				0	Foamer cleaning
x				0	Mixer rinsing
x					Combi spout cleaning, standard
	x			0	Combi spout cleaning, Plug&Clean
x				0	Milk container cleaning
x					Grounds container cleaning
x					Drip tray cleaning
x					Housing cleaning
	x				Brewing unit cleaning
(x)	x			0	Mixer cleaning
		x			Bean hopper cleaning
		x		0	Product hopper cleaning
			x	0	Filter change



▷ Cleaning instructions

▷ General cleaning

▷ Weekly cleaning

▷ Regular cleaning

▷ Software ▷ Care

- Daily – Daily, at least once per day and as required
- Weekly – Weekly cleaning
- Regularly – Regularly as required
- Message – After the display shows a message
- Optional – Optional (depending on the model)
- (x) – Daily as required


5.1 Daily cleaning

For all cleaning instructions

See the step for step instructions ▷ Cleaning instructions.
Follow the manual. Follow the safety instructions.

5.1.1 Cleaning program

The cleaning program leads step by step through foamer cleaning via software.
On coffee machines with a mixer system, this is followed by a mixer rinsing.




Cleaning program
▷ Cleaning instructions


5.1.2 Milk system cleaning

Foamer cleaning ▷ Cleaning instructions.
The milk system consists of:

- Combi spout
- Milk nozzle
- Milk hose



The milk system must be thoroughly cleaned and sanitized at least once a day, after no more 24 hours.
For machines with Plug&Clean, this must be done as part of the machine cleaning at the end of the service day.
If this Plug&Clean cleaning is not done, then the combi spout must be disassembled and cleaned manually.



Milk hose should be changed at regular intervals.



Combi spout cleaning
▷ Cleaning instructions

Foamer cleaning, standard

Cleaning the combi spout consists of two, or optionally three parts.

- Automatic foamer rinsing after each beverage with milk or milk foam (optional)
- Display-guided foamer cleaning
- **Once per day**, place combi spout, milk hose and milk nozzles in a cleaning solution

Foamer cleaning Plug&Clean

Cleaning with Plug&Clean consists of three parts.

- Automatic foamer rinsing for a maximum of 3 minutes after each beverage with milk or milk foam
- Display-guided milk system rinsing
- **Once per week**, lay combi spout, milk hose and milk nozzles in a cleaning solution



Plug&Clean cleaning program
▷ *Cleaning instructions*

5.1.3 Mixer rinsing

Mixer rinsing is an interim cleaning of the mixer.

Mixer rinsing is an integral part of the cleaning program.



Mixer rinsing
▷ *Cleaning instructions*

The mixer lift must be in the top position.

5.1.4 Combi spout cleaning

Thorough cleaning of the milk system. The exact sequence of this manual cleaning is described in the cleaning instructions.



Combi spout cleaning
▷ *Cleaning instructions*

5.1.5 Milk container cleaning

Clean the milk container thoroughly every day.



Caution.
Follow the hygiene instructions.
See HACCP schedule.

5.1.6 General cleaning

Grounds container cleaning (grounds chute, optional)

✱ Empty the grounds container and rinse under running water

✱ Clean with a clean, damp cloth

Drip tray, housing and front panel

✱ Clean the cold machine using a damp cloth

✱ Wipe dry using a fine woollen cloth or chamois leather

Cleaning metal surfaces

For cleaning metal housing parts (matte surface) we recommend WMF Purargan® cleaner.

Order numbers for the WMF care program
▷ *Appendix*
Accessories and spare parts
page 65

Switch off the machine before cleaning the front panel to avoid a beverage being accidentally dispensed.

Do not clean with scouring powders or the like. There is a risk of causing scratches or scores. Do not use any sharp cleaning materials or implements. Use soft cloths for cleaning.



Risk to the machine.
Follow the manual.

5.2 Weekly cleaning

5.2.1 Cleaning the brewing unit

- * Switch off coffee machine using the On/Off switch
- * Disconnect mains plug
- * Push combi spout all the way up
- * Remove grounds container towards the front of the machine

- * Remove the drip tray

Brewing unit is now fully accessible.

Burn hazard.

Allow brewer to cool before cleaning.

Hold firmly, as the brewing unit can slip downwards.

Never use force. Danger of breakage.

- * With one hand, reach into the chute under the brewing unit and release the retaining catch (illustration 1)
- * Remove brewing unit and hold firmly (illustration 2)
- * Slowly guide the brewing unit downwards, tilt and pull forward

Use the multitool from the accessories.

- * Turn the thread on the brewing unit head counter-clockwise (illustration 3) until the wiper is in the forward position
- * Push the springs outwards over the edge and unlock (illustration 4)
- * Swing the insertion chute upwards
- * Clean the brewing filter under running water or with a cloth
- * Remove residual coffee grounds using a paint-brush or scrubber







Illustration 1



Illustration 2

- * Rinse the brewing unit under running water

Never clean the brewing unit in a dishwasher and never use any cleaner additives.



- * Dry the brewing unit with a cloth
Allow to dry completely before reinstalling in the coffee machine.

Remove coffee grounds residue from the chute.

- * Wipe out the coffee grounds towards the front or suck out using a vacuum cleaner

Refit the brewing unit after it has been dried.

- * Replace springs in insertion unit (illustration 4)
- * Hold the pusher compressed and replace the brewing unit in the chute against rear wall
- * Push brewing unit upwards until it engages in the lock
- * Replace grounds container
- * Close the adjustable screen




Illustration 3



Illustration 4

If the brewing unit cannot be replaced without resistance: Turn thread on the brewing unit head slightly to the left or right with the multitool until the brewing unit slides into the guide.

Never use force.



Brewing filter

5.2.2 Choc/Topping mixer cleaning (optional)

Choc mixer/Topping mixer

Cleaning will be more frequent depending on powder consumption.

- * Switch off coffee machine using the On/Off switch
- * Disconnect mains plug
- * Open left machine door
- * Pull the green mixer release
- * Slide the mixer lift downward

The mixer is now accessible.

- * Pull off mixer hose from mixer to combi spout
- * Turn stud on bayonet fitting underneath the mixer bowl counter-clockwise

Mixer bowl is released from the arrester lock.

- * The propeller for the mixer is now visible and can be cleaned with a cloth
- * Dismantle two-piece mixer bowl
- * Clean both parts of mixer bowl and mixer hose under warm running water
- * Allow all parts to dry completely
- * Re-assemble all components

On re-assembly, all openings must face in the same direction.

- * Replace mixer bowl
- * Turn stud on bayonet connector back clockwise
- * Push mixer hose onto mixer bowl fitting again, and plug in combi spout
- * **Push mixer lift upwards until it engages in the release**
- * Close left machine door

Ensure that mixer hose is replaced securely. This is important, as otherwise hot water or hot Choc/Topping beverage may escape.



Mixer release



open



Ensure that the spiral guide is seated and the hose is not pinched.



Caution.
Scalding hazard.

Observe the Safety chapter.

5.3 Regular cleaning

5.3.1 Bean hopper cleaning

The bean hoppers should be cleaned as required and at regular intervals (at least monthly).

- * Switch off coffee machine using the On/Off switch
- * Disconnect mains plug
- * Release bean hoppers lock using multitool by turning in a clockwise direction
- * Lift bean hoppers out
- * Completely empty bean hoppers and wipe thoroughly with a damp cloth
- * Allow bean hoppers to dry completely
- * Refill and replace bean hoppers
- * Lock with the multitool by turning counter-clockwise



open



close



Never reach into the coffee grinders.
Never clean the bean hoppers in a dishwasher.



Caution.
Bruising or crushing
hazard.

Observe the Safety chapter.

5.3.2 Product hopper cleaning (optional)

Choc/Topping, Twin Topping, Twin Choc

Cleaning will be more frequent depending on powder consumption.

- * Switch off coffee machine using the On/Off switch
- * Disconnect mains plug
- * Unlock product hopper with multitool by turning counter-clockwise
- * Lift product hopper out and empty completely
- * Unscrew union nut at front and rear
- * Remove the dosing auger



open



close

- * Thoroughly wipe out hopper with a damp cloth
- * Thoroughly clean individual dosing auger components
- * Allow product hopper and individual components to dry completely
- * Re-assemble and insert the dosing auger and screw on union nuts



Portion controller with individual parts, dosing auger

Ensure correct orientation of discharge.


- * Refill and replace product hopper
- * Lock with the multitool by turning clockwise



Special features of the Twin Choc hopper/ Twin Topping hopper

The Twin Choc hopper is divided in the middle and has two separate compartments for two different types of Choc or Topping.

Never clean product hoppers in the dishwasher.

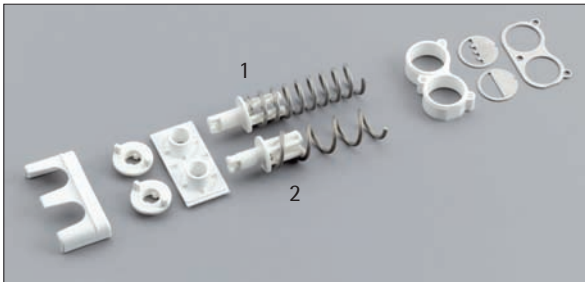

Dismantled dosing augers



Risk to the machine.

Follow the manual.

- 1 = Topping
- 2 = Choc

With Twin-Choc:
dosing auger 2 is used
twice.

5.4 Filter change

Follow the water filter User Manual for a filter change. After a filter change, perform a rinse as guided by the display.



▷ Software ▷ Filter change
page 25

Filter change message
▷ Messages and instructions
page 48

Chapter 6 HACCP schedule

You are required by law to ensure that your customers are not subject to any health risks as a consequence of consumption of food items you serve.

A HACCP schedule (Hazard Analysis Critical Control Points) for risk identification and assessment is required. You should carry out a risk analysis on your premises. The aim of the analysis is to recognize and pre-empt food hygiene hazard points. For this purpose, monitoring and, where necessary, test procedures must be established and implemented.

With correct installation, care, maintenance, and cleaning, WMF coffee machines meet the requirements described above. If care of the coffee machines is not carried out properly, dispensing milk beverages will constitute a food hygiene hazard point.

Please observe the following points in order to comply with the HACCP Schedule:

"Food Hygiene Ordinance from 05.08.1997"

Use our HACCP schedule for monitoring of regular cleaning.

Sanitize the milk system daily

- Follow the cleaning instructions for the milk system contained in the cleaning instructions. This will ensure that your system contains a minimum of bacteria at commencement of operation.

You can call up the logs of the most recent cleaning operations via info pad .



Always commence operation with a freshly opened cooled milk pack

- Original packaged UHT milk is usually free from harmful bacteria. Always open a new cooled pack at commencement of operation.
- Ensure absolute cleanliness when opening the milk pack. Germs can be introduced from dirty hands or tools when opening.

Recommendation:

Only use UHT milk with a 1.5% fat content.

- Always have a new cooled milk pack handy.
- If a cooled freshly opened pack is used within a period not exceeding 3 hours, refrigeration during use is not necessary.
- If little milk is being used, cooled milk must be placed in the refrigerator again during operation.

*At commencement of operation
milk should be at approx. 6–8 °C.*

Depending on the setting, one litre of milk is sufficient for approx. 20 cappuccinos.

WMF AG offers a range of refrigeration options (e.g., WMF countertop coolers or WMF milk coolers).

Recommendation for Choc and Topping (optional)

Regularly clean the product hopper. See the instructions in the Care chapter.

See chocolate/topping manufacturer's instructions.



Caution. Follow the hygiene instructions.

See Care chapter.

HACCP schedule

Month _____ Year _____

Use only chilled UHT milk, to prevent health risks due to bacteria.

For Choc and Topping, use only products that have not exceeded their expiration date.

Cleaning steps:

1. Run the cleaning program.
▷ Cleaning instructions
- 2a. Foamer cleaning (combi spout)
▷ Cleaning instructions
- 2b. Daily mixer cleaning
▷ Cleaning instructions

- 3a. Clean the foamer and change out the combi spout after 4 hours of operation. (Absolutely required for low number of dispense cycles, or if milk is not chilled.)
- 3b. Weekly mixer cleaning and regular product hopper cleaning. (Care chapter)
4. General machine cleaning.

Date	Cleaning steps					Signature
	Time of day					
	1	2	3	4		
1.						
2.						
3.						
4.						
5.						
6.						
7.						
8.						
9.						
10.						
11.						
12.						
13.						
14.						
15.						
16.						

Date	Cleaning steps							Signature
	Time of day							
	1	2	3			4		
17.								
18.								
19.								
20.								
21.								
22.								
23.								
24.								
25.								
26.								
27.								
28.								
29.								
30.								
31.								

Chapter 7 Maintenance

Please observe that this is a professional industrial coffee machine which needs regular maintenance and descaling. Timing of descaling is calculated by the machine and depends on the degree of hardness of the local mains water and whether or not a water filter is fitted. The maintenance schedule is based on the degree of use of the machine and is shown on the display. The coffee machine may continue to be operated after the message, but Customer Care or contract maintenance should be carried out promptly to ensure correct functioning and so as to avoid any consequent damage.

7.1 Coffee machine maintenance

The following care or maintenance stages are provided:

- Customer Check-up after the display shows a message; may be undertaken by the user/operator.
- Maintenance 1/maintenance 2 after the display shows a message; may only be undertaken by trained personnel or by WMF Service, as in this instance components affecting safety must be replaced.
- Revision after the display shows a message; may only be undertaken by trained personnel or by WMF Service, as in this instance components affecting safety must be replaced.



Descaling
▷ Software ▷ Care
page 24



Customer Check-up after the display shows a message see Customer Check-up Instructions in Customer Check-up Kit.
▷ Appendix: Accessories and spare parts

Service maintenance message
▷ Messages and instructions
page 48



For other maintenance work and repairs, please contact your local WMF Service.
The telephone number can be found on the address sticker on the coffee machine and on the delivery note.

7.2 WMF Service

You can reach the WMF Service Centre if the local WMF Service is not known.



Chapter 8 Messages and instructions

8.1 Messages for operation

Error number

(▷ Software ▷ Settings ▷ Operating options)

normal: all messages are shown on the display.

Symbol: Messages that require immediate action are shown on the display.

All other messages are displayed as symbol .

* Touch the  symbol

All messages are displayed.



With illumination (optional):
messages that require immediate
action are accompanied by
flashing side illumination.

Refill beans

* Top up bean hopper (refer to display)


* Check:

- Is the product hopper lock open?

▷ Care

- Beans do not feed through

* Stir with a large spoon and confirm with 



Empty milk message

* Refill milk



Empty grounds container

* Empty grounds container



Grounds container missing

* Replace the grounds container correctly and close adjustable screen



Grounds container emptied?

* Confirm that the grounds container has indeed been emptied



Manual insert open

* Close the manual insert lid



Open water supply valve

- * Turn on water mains supply and confirm



Brewing unit error


- * Remove brewing unit
- * Clean brewing filter
- * Replace brewing unit and ensure that it engages correctly in the lock



Error message with error number

Error number is displayed.

▷ Error messages/malfunctions



Error message with error number

Error number is displayed.

- * Call WMF Service



Change filter

- * Change filter within one week
 - * Confirm the change in the Care menu
- Follow water filter instructions.*



Cleaning message – clean soon

- * Clean the coffee machine soon
- The message is also displayed in the Info pad.*



Cleaning message – clean now

- * Clean the coffee machine now
- The message is also displayed in the Info pad.*
Cleaning required. The coffee machine can only be used after the cleaning operation.



Descaling Message

- * Call WMF Service



Customer check-up message

- * Carry out customer check up within one week
- * Confirm execution in the Care menu



Maintenance message

- ✱ Call WMF Service



Heating up

- ✱ Machine heats up



Ready to operate

The display illumination can be activated.



Beverage dispensing



Warm rinsing

The machine performs a warm rinsing operation.



Activate "Ready to operate" display

- ✱ Touch the unlit menu pad for longer than 5 seconds

The display illumination switches on.

Menu pad, Info pad, error messages and cleaning messages are displayed.

▷ "Ready to operate" display



Optional pads

The Barista pad, "warm rinse" pad and the "toggle pad" are displayed. The various options must first be activated.

Optional



Display "warm rinse" pad and Barista pad

8.2 Error messages and malfunctions

Basic procedure on display of error messages or malfunctions.

- * Switch coffee machine off and then on again after a few seconds
- * Repeat the process which led to the error

In many cases, this eliminates the malfunction and you can continue working.

If this is not successful: Find the error message or error number in the following list and follow the sequence of actions indicated.

If this does not rectify the error or if the error indicated is not listed please call WMF Service.

Some messages lead to blocking of individual functions. You will notice this by the fact that the beverage button illumination goes out. The beverage buttons that are still illuminated can continue to be used.

Your WMF 1800 S is provided with a diagnostics program. Any errors that occur are shown on the display. The error messages listed may also be caused by an interruption to the mains electricity supply.

If there is a current error or a message to the operator, the  pad is displayed.

- * Touch the  pad
Error number is displayed.

Error number	Error description	Action instructions
6	Brewing unit lockup current/ Brewing unit stiff	* Switch off the coffee machine * Clean the brewing unit ▷ Care ▷ Cleaning the brewing unit
26 36	Right grinder blocked Left grinder blocked 	* Switch off the coffee machine * Disconnect mains plug * Remove bean hopper * Turn grinder disk counter-clockwise using only Multitool (square button) (see illustration) * Replace hopper * Switch on coffee machine ▷ Care ▷ Bean hopper cleaning If this occurs frequently: * Set grinding degree one stage coarser ▷ Other settings ▷ Set grinding degree
88	Boiler: over temperature	Beverage dispensing temporarily blocked. * Check that mains tap is on or that the water tank is filled and inserted correctly If still not OK: * Switch off the coffee machine * Clean the brewing unit ▷ Care ▷ Cleaning the brewing unit * Switch on and try again (Release follows when cooled down to normal temperature). * Switch off coffee machine, allow to cool and switch on again
89	Boiler: heat-up time error	* Switch machine off and on again
161	Water error: brewing water	Between each of the following steps switch the machine off and on again. If error not remedied carry out the next step. * Check that mains tap is on or that the water tank is filled and inserted correctly * Clean the brewing unit ▷ Care ▷ Cleaning the brewing unit * Set grinding degree coarser ▷ Other settings * Reduce quality ▷ Settings ▷ Recipe



Error number	Error description	Action instructions
163	Water error: warm rinsing	<i>Between each of the following steps switch the machine off and on again. If error not remedied carry out the next step.</i> * Check that mains tap is on or that the water tank is filled and inserted correctly * Clean the brewing unit ▷ Care ▷ Cleaning the brewing unit
186	Steam boiler: level	<i>Beverage dispensing temporarily blocked.</i> * Check that grounds container is correctly inserted * Switch machine off and on again
188	Steam boiler: over temperature	<i>Beverage dispensing temporarily blocked.</i> * After releasing, check milk foam and steam outlet * Switch off machine, allow to cool and switch on again
189	Steam boiler: heat-up time error	* Switch machine off and on again

8.3 Errors without error message

Error pattern	Action instructions
No hot water output but water in grounds container	* Clean hot water spout * Call WMF Service (coffee dispensing possible)
No Choc or Topping dispensing but water in grounds container	* Do not use Choc or Topping * Call WMF Service (coffee dispensing possible)
Choc or Topping hopper blocked, Choc or Topping dispensed only with water	* Clean portioner ▷ Care * Empty powder * Turn dosing auger manually until all powder is removed * If necessary rinse with water * (Allow to) dry completely
Coffee dispensing on the left/right differs	* Clean the combi spout ▷ Cleaning instructions
No milk foam/milk output, but milk in milk container	* Check whether the milk hose is kinked or squashed * Re-route tube correctly * Clean the combi spout * Milk nozzle blocked ▷ Cleaning instructions * Milk cooler iced
Milk foam incorrect, temperature too cold or too hot	* Change milk nozzle - green milk nozzle for cooled milk - white milk nozzle for uncooled milk * Clean the combi spout ▷ Cleaning instructions
The cooler does not cool	* Check if the cooler has been properly turned on using the separate switch
Pump runs continuously water in grounds container	* Switch machine off and on again * If error not remedied call WMF Service
Coffee machines with water tank assembly/disassembly stiff	* Lightly smear the O-rings with WMF gasket grease
Choc/Topping hopper cannot be inserted	* Manually turn the drive for the dosing auger at the portioner slightly in a clockwise direction

Chapter 9 Safety

9.1 Hazards to the operator

At WMF, safety is one of the most essential product features. The effectiveness of safety devices can only be ensured if the following points are observed:

- Read the User Manual carefully prior to use.
- Do not touch hot machine components.
- Do not use the machine if it is not working properly or if it is damaged.
- Built-in safety devices must never be altered.
- This device is not designed for persons (including children) with limited physical, sensory or mental capabilities or who lack the required experience and/or knowledge, unless they are supervised by a person responsible for their safety or have received instructions from them about how the device should be used.
- Children should be supervised to ensure that they do not play with the device.





Despite safety devices, every machine poses numerous hazards if incorrectly used. Please observe the following instructions when using the coffee machine so as to prevent injury and health hazards:

Scalding hazard.

When dispensing coffee, Choc/Topping, hot water and steam there is hazard of scalding. Ensure that there is always a receptacle under the spout when dispensing beverages.

Burn hazard.

The brewing unit must be cleaned only when the machine is cold. The brewing unit can get hot.

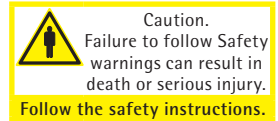

Bruising or crushing hazard.

There is a hazard of bruising or crushing when handling all moving parts. Do not reach into the bean hopper or the brewing unit opening when the coffee machine is switched on.



Caution.
Bruising or crushing
hazard.

Risk of injury.

Health hazard.

The product hoppers (coffee beans/Choc/Topping) and manual insert may only be filled with materials for the use intended.



Caution.
Health hazard.

Only use as intended.

Health hazard.

When handling special cleaners for the milk foamer, cleaning tablets, and the descaling solution, follow the protective measures on the packaging. The special cleaners for the milk foamer and cleaning tablets are irritants. Only put in cleaning tablet or descaling solution after instructions to do so are shown on the display.



Caution.
Health hazard.

**Follow the instructions of the
label on the cleaning agents.**

Irritation and scald hazard.

Never reach under the spouts while cleaning. Cleaning fluid/descaling solution runs out of the combi spout when cleaning/descaling.



Caution.
Health hazard.

**Irritation and scald hazard in
the dispensing area.**

9.2 Hazards to the coffee machine

Please observe the following points so as to prevent problems with and damage to the coffee machine:

- For water with carbonate hardness in excess of 5 °dKH, a WMF water filter must be fitted; otherwise, the coffee machine can be damaged due to build-up of scale.
- For insurance reasons always ensure that, at the end of operation, the mains water supply for the water supply is turned off and the machine is unplugged.

- We recommend damage prevention measures such as:
 - installation of a suitable water monitor in the mains water supply
 - installation of smoke alarms
- After a company holiday we recommend running the cleaning program at least twice before reusing the machine.



▷ Cleaning instructions

9.3 Intended use

The WMF 1800 S is designed to dispense coffee beverages, milk beverages and/or powdered beverages (Choc and topping) in various variations into cups or cans. In addition, the device can generate steam for heating milk and dispensing hot water. This device is also intended for industrial and commercial use and for use by professionals and trained users in shops in the consumer goods industry and agricultural holdings, or for the commercial use by non-professionals. The device can be used as a self-service device if it is supervised by trained personnel.

The use of the device is also subject to the "General Terms and Conditions" of WMF AG and this user manual. Any other use or use that goes beyond the aforementioned is considered incorrect use. The manufacturer shall not be liable for any damage resulting from this.

Under no circumstances may the WMF 1800 S be used to dispense and heat liquids other than coffee, hot water (beverages, cleaning) or milk (cooled, pasteurised, homogenised, UHT).

9.4 Directives

The machine fulfils the requirements of the Regulation on Commodities, the EC regulation No. 10/2011 as well as the EC regulation No. 1935/2004 in the currently valid editions.

When used properly, the machine does not present a hazard to health or other unjustifiable hazard.

The materials and raw materials used fulfil the requirements of the Regulation on Commodities as well as the EC regulations No. 10/2011.

The machine fulfils the requirements of all applicable regulations in the directives MD (MR) 2006/42/EC (EG), Directive 2004/108/EC (EG), Directive 2002/95/EC (ROHS), Directive 2002/96/EC (WEEE).

The EC declaration of conformity is included with the machine. The machine bears the CE mark.

Any modifications that are not approved by WMF will cause this declaration to become invalid. Currently valid national rules apply in countries outside of the European Union.

This device is subject to the directive on waste electrical and electronic equipment (WEEE/EU directive) and may not be disposed of as domestic waste.



For disposal please contact the WMF Service.

9.5 Duties of the owner/operator

The operator of such equipment must ensure regular maintenance by WMF Service technicians, their agents or other authorised persons, and checking of safety devices. Access to the service area is permitted only for persons with knowledge and practical experience with the unit, especially regarding safety and hygiene.

The coffee machine must be set up by the operator such that care and maintenance can be performed without hindrance.

In office/floor supply or similar self-service applications, only staff instructed in operation of the machine should supervise the machine. Trained personnel should carry out maintenance and be available for questions regarding use.

The operator shall ensure that electrical equipment and operating facilities are in a fit state (e.g. to BGV A3) [German Accident Prevention Association or equivalent].

In order to ensure the operating safety of your coffee machine, it is essential to perform regular checks of the safety valves and the pressure containers, among other checks. These measures are conducted by WMF Service or by WMF authorised service personnel as part of the maintenance work.

Machine cleaning must be done only using the WMF special cleaning agents intended by WMF for the machine (tablets), and for the milk system (cleaning liquid). The manufacturer's specifications regarding maintenance cycles and frequency of maintenance (▷ Maintenance) are to be observed.

WMF special cleaning agent,
▷ Appendix
Accessories and spare parts
page 65


9.6 Warranty claims

During the warranty period of 12 months from transfer of risk, the purchaser has statutory warranty entitlements. The vendor should always be afforded the opportunity to rectify errors within an appropriate period. Claims above and beyond the above, in particular damage claims as a result of consequential damage, are excluded, to the extent that this is legally permissible. Material defects shall be reported to the vendor immediately and in writing.

Warranty period 12 months

No warranty is provided:

- On any parts subject to natural wear and tear. This includes seals, mixers, and brewing unit, among other items.
- For malfunctions due to the effect of the weather, scale build-up, chemical, physical, electrochemical or electrical effects, unless attributable to a fault on the part of WMF.
- If a water filter is not fitted even though the local water supply requires use of a water filter and malfunctions occur as a consequence.
- With respect to faults which occur as a result of failure to follow handling instructions and regulations, maintenance and care of the unit (e.g. User Manual and servicing instructions).
- With respect to faults which occur as the result of failure to use original WMF replacement parts or incorrect assembly by the purchaser or by third parties or by faulty or negligent treatment.
- With respect to the consequences of improper modifications undertaken without our consent or by repair or reconditioning work on the part of the purchaser or by third parties.
- With respect to faults caused by inappropriate or improper use.



The customer is advised in the order confirmation whether or not use of a water filter is required.



▷ Maintenance
page 46

Cleaning instructions 1800 S

Please refer to the User Manual.

Follow the overview of cleaning interval schedule in the Care chapter in the User Manual.

Print out the first cleaning, read the User Manual, Care chapter.

1800S

Standard Cleaning Program			
1 Touch CLEAN	2 Touch Insert milk hose	3 Touch Machine cleaning	4 Touch Rinse
5 The cleaning program starts.	6 Open the manual insert lid Add a special WMF cleaning agent 0.5 l of clear, cold water	7 The safe menu (Care) appears. Touch Machine cleaning	8 Remove and empty grounds container The notice if must be followed
9 Close the manual insert lid	10 Close the manual insert lid	11 Press cleaning starts. Duration: approx. 20 seconds.	12 Press rinse Duration: approx. 20 seconds.
13 Machine cleaning starts. Duration: approx. 6 minutes.	14 Machine cleaning starts. Duration: approx. 6 minutes.	15 Machine cleaning starts. Duration: approx. 6 minutes.	16 Machine cleaning starts. Duration: approx. 6 minutes.

Former cleaning

1. Touch **Former cleaning**

2. Touch **Former cleaning**

3. Touch **Former cleaning**

4. Touch **Former cleaning**

5. Touch **Former cleaning**

6. Touch **Former cleaning**

7. Touch **Former cleaning**

8. Touch **Former cleaning**

9. Touch **Former cleaning**

10. Touch **Former cleaning**

11. Touch **Former cleaning**

12. Touch **Former cleaning**

13. Touch **Former cleaning**

14. Touch **Former cleaning**

15. Touch **Former cleaning**

16. Touch **Former cleaning**

17. Touch **Former cleaning**

18. Touch **Former cleaning**

19. Touch **Former cleaning**

20. Touch **Former cleaning**

21. Touch **Former cleaning**

22. Touch **Former cleaning**

23. Touch **Former cleaning**

24. Touch **Former cleaning**

25. Touch **Former cleaning**

26. Touch **Former cleaning**

27. Touch **Former cleaning**

28. Touch **Former cleaning**

29. Touch **Former cleaning**

30. Touch **Former cleaning**

31. Touch **Former cleaning**

32. Touch **Former cleaning**

33. Touch **Former cleaning**

34. Touch **Former cleaning**

35. Touch **Former cleaning**

36. Touch **Former cleaning**

37. Touch **Former cleaning**

38. Touch **Former cleaning**

39. Touch **Former cleaning**

40. Touch **Former cleaning**

41. Touch **Former cleaning**

42. Touch **Former cleaning**

43. Touch **Former cleaning**

44. Touch **Former cleaning**

45. Touch **Former cleaning**

46. Touch **Former cleaning**

47. Touch **Former cleaning**

48. Touch **Former cleaning**

49. Touch **Former cleaning**

50. Touch **Former cleaning**

51. Touch **Former cleaning**

52. Touch **Former cleaning**

53. Touch **Former cleaning**

54. Touch **Former cleaning**

55. Touch **Former cleaning**

56. Touch **Former cleaning**

57. Touch **Former cleaning**

58. Touch **Former cleaning**

59. Touch **Former cleaning**

60. Touch **Former cleaning**

61. Touch **Former cleaning**

62. Touch **Former cleaning**

63. Touch **Former cleaning**

64. Touch **Former cleaning**

65. Touch **Former cleaning**

66. Touch **Former cleaning**

67. Touch **Former cleaning**

68. Touch **Former cleaning**

69. Touch **Former cleaning**

70. Touch **Former cleaning**

71. Touch **Former cleaning**

72. Touch **Former cleaning**

73. Touch **Former cleaning**

74. Touch **Former cleaning**

75. Touch **Former cleaning**

76. Touch **Former cleaning**

77. Touch **Former cleaning**

78. Touch **Former cleaning**

79. Touch **Former cleaning**

80. Touch **Former cleaning**

81. Touch **Former cleaning**

82. Touch **Former cleaning**

83. Touch **Former cleaning**

84. Touch **Former cleaning**

85. Touch **Former cleaning**

86. Touch **Former cleaning**

87. Touch **Former cleaning**

88. Touch **Former cleaning**

89. Touch **Former cleaning**

90. Touch **Former cleaning**

91. Touch **Former cleaning**

92. Touch **Former cleaning**

93. Touch **Former cleaning**

94. Touch **Former cleaning**

95. Touch **Former cleaning**

96. Touch **Former cleaning**

97. Touch **Former cleaning**

98. Touch **Former cleaning**

99. Touch **Former cleaning**

100. Touch **Former cleaning**

Mixer rinsing

1. Touch **Mixer rinsing**

2. Touch **Mixer rinsing**

3. Touch **Mixer rinsing**

4. Touch **Mixer rinsing**

5. Touch **Mixer rinsing**

6. Touch **Mixer rinsing**

7. Touch **Mixer rinsing**

8. Touch **Mixer rinsing**

9. Touch **Mixer rinsing**

10. Touch **Mixer rinsing**

11. Touch **Mixer rinsing**

12. Touch **Mixer rinsing**

13. Touch **Mixer rinsing**

14. Touch **Mixer rinsing**

15. Touch **Mixer rinsing**

16. Touch **Mixer rinsing**

17. Touch **Mixer rinsing**

18. Touch **Mixer rinsing**

19. Touch **Mixer rinsing**

20. Touch **Mixer rinsing**

21. Touch **Mixer rinsing**

22. Touch **Mixer rinsing**

23. Touch **Mixer rinsing**

24. Touch **Mixer rinsing**

25. Touch **Mixer rinsing**

26. Touch **Mixer rinsing**

27. Touch **Mixer rinsing**

28. Touch **Mixer rinsing**

29. Touch **Mixer rinsing**

30. Touch **Mixer rinsing**

31. Touch **Mixer rinsing**

32. Touch **Mixer rinsing**

33. Touch **Mixer rinsing**

34. Touch **Mixer rinsing**

35. Touch **Mixer rinsing**

36. Touch **Mixer rinsing**

37. Touch **Mixer rinsing**

38. Touch **Mixer rinsing**

39. Touch **Mixer rinsing**

40. Touch **Mixer rinsing**

41. Touch **Mixer rinsing**

42. Touch **Mixer rinsing**

43. Touch **Mixer rinsing**

44. Touch **Mixer rinsing**

45. Touch **Mixer rinsing**

46. Touch **Mixer rinsing**

47. Touch **Mixer rinsing**

48. Touch **Mixer rinsing**

49. Touch **Mixer rinsing**

50. Touch **Mixer rinsing**

51. Touch **Mixer rinsing**

52. Touch **Mixer rinsing**

53. Touch **Mixer rinsing**

54. Touch **Mixer rinsing**

55. Touch **Mixer rinsing**

56. Touch **Mixer rinsing**

57. Touch **Mixer rinsing**

58. Touch **Mixer rinsing**

59. Touch **Mixer rinsing**

60. Touch **Mixer rinsing**

61. Touch **Mixer rinsing**

6

Appendix: Technical data

Technical data for coffee machine

Nominal power rating * (depending on the model)	3 kW (2.75 kW-3.25 kW*)
Recommended daily capacity espresso, café crème	up to 180 cups
Overall hot water output	approx. 20 l/h
Coffee bean hopper	left and right each approx. 1,000 g middle approx. 550 g
Choc/Topping hopper	approx. 1,000 g
Twin Choc/Topping hopper	twice approx. 500 g
Mains power connection *	1/N/PE 230 V 50 Hz
Illumination	LED class 1
External dimensions	width 326 mm height incl. bean hopper 680 mm depth 556 mm
Weight empty	approx. 33-43 kg (depending on the model)
Continuous sound pressure level (Lpa)**	< 70 dB (A)

We reserve the right to make technical modifications.

* For special models see model label, values given above are for the basic model.

** A-evaluated sound pressure level Lpa (slow) and Lpa (impulses) at operating personnel workplace is under 70 db (A) in any working mode.

Conditions for usage and installation

Necessary preparatory work for electricity, water and drainage connections at the customer's premises are to be arranged by the machine owner/operator. The work must be carried out by authorised installation technicians in compliance with general, country-specific and local regulations. The WMF service engineers may only connect the machine to existing prepared connection points. WMF Service is neither authorised nor responsible for carrying out any work on-site prior to connection.

Mains voltage tolerance range	230 V +6% and -10%, Mains voltage interruption < 50 ms: no interruption of function
Water supply	3/8 inch hose connector with main valve, and filter with 0.2 to 0.25 mm mesh size, on site. Min. 0.2 MPa flow pressure at 2 l/min., max. 0.6 MPa. Water temperature max. 35 °C. The set of hoses provided with the new coffee machine and/or the new water filter must be used. Do not use old hoses.
Water quality	For drinking water with a carbonate hardness above 5 °dKH a WMF water filter should be installed upstream.
Water drain pipe	Hose a min. DN 19, minimum downward slope of 2 cm/m
Ambient temperature	+5 °C to max. +35 °C (empty the water line in case of frost).
Maximum humidity	80% relative humidity without condensation. Do not use unit outdoors.
Degree of protection	IP X0
Installing surface	The unit must be placed on a level, flat, and sturdy surface. The unit is not intended to be located on a surface that is sprayed or cleaned with a water hose, steam jets, steam cleaner, or similar devices.
Installation clearances	For operating, service and safety reasons the machine should be installed with a clearance of not less than 50 mm at the back and sides from the building or non-WMF components. A clear height of 1,100 mm from the top of the supporting surface should be ensured. The height of the installation surface above the floor is at least 850 mm. If the machine connections are to be run downwards through the counter, please make space for the lines, which can reduce the usable space below the machine.
Installation dimensions of the water filter	See the User Manual for the water filter.

These specifications for the electrical connection and the standards quoted apply for connecting the machine in EU countries. It may be necessary to also observe additional country-specific regulations. Outside the EU countries acceptance of the standards quoted is to be checked by the legal entity or natural person who wishes to use the machine.

The local power supply must be constructed according to IEC 364. To improve safety, the coffee machine should be fitted with an FI 30 mA earth leakage current circuit breaker complying with EN 61008. Near the device or about 30 cm below the counter top there should be a shockproof socket as a single-phase connection installed locally on the rear or side wall of the counter substructure or a country-specific single-phase socket. If the mains cable for this device is damaged then it must be replaced by our service personnel or a similarly qualified person, in order to prevent hazards. If the coffee machine is permanently connected to the mains then an all-pole disconnecting separator (mains switch) according to EN 60947 with a minimum 3 mm contact gap must be installed. A separator switch is recommended for a flexible connection. The mains cable must not come into contact with hot surfaces. The mains switch and plug top are part of the customer's on-site installation. The machine may not be fitted with a fixed permanent mains connection if installed on a transporting trolley (a mobile station).

In order to avoid possible faults from arising on our shielded data lines due to potential equalization currents between the devices, an additional potential equalization unit should be planned for devices connected to the vending system. (See EN 60309)

Appendix: Accessories and spare parts

Number	Unit	Designation	Order No.	Model
Complete combi spout Choc				
1	Pcs	Single spout	33 2549 0000	all
1	Pcs	Steam nozzle compl. with seal Ø 2.3 (2.9 KW)	33 2864 3300	
1	meter	Milk hose	00 0048 4948	all
1	Pcs	Milk hose spring	33 0190 3000	all
1	Pcs	Milk hose sleeve	33 2180 5000	all
Choc/Topping mixer				
0.25	meter	Mixer hose	00 0048 0064	Choc/Topping
1	Pcs	Mixer hose spring	33 2292 6000	Choc/Topping
1	Pcs	Mixer bowl	33 2318 0000	Choc/Topping
Constant water supply, drainage				
1	Pcs	Connecting tube for constant water supply	33 2292 1000	all
1	Pcs	Angle for drain tube	33 2165 8000	all
1.5	meter	Drain tube	00 0048 0042	all
Accessories/tools				
1	Pcs	Multitool	33 2323 1000	all
Documentation/Instructions				
1	Pcs	Set of documents: • User Manual WMF 1800 S • Cleaning instructions WMF 1800 S	33 2552 0010	all
Complete bean hopper				
1	Pcs	Large bean hopper	33 2851 2099	all
1	Pcs	Large bean hopper lid	33 2806 3100	all
1	Pcs	Closing plate	33 2265 5000	all
1	Pcs	Medium bean hopper	33 2854 2000	all
1	Pcs	Medium bean hopper lid	33 2854 3000	all

Number	Unit	Designation	Order No.	Model
Product hopper Choc/Topping				
1	Pcs	Choc product hopper	33 2845 4199	Choc
1	Pcs	Topping product hopper	33 2845 4259	Topping
1	Pcs	Product hopper lid Choc/Topping	33 2806 3100	Choc/Topping
1	Pcs	Twin Choc product hopper	33 2845 4399	Twin Topping
1	Pcs	Twin Topping product hopper	33 2845 4099	Twin Topping
1	Pcs	Product hopper lid Twin Choc/Twin Topping	33 2806 4100	Twin Topping
1	sheet	Labels for product hopper	33 2315 3000	all
Coffee grounds container				
1	Pcs	Coffee grounds container	33 2272 4000	all
Brewing unit				
1	Pcs	Brewing unit	33 2823 6199	all
Drip tray/drip grid				
1	Pcs	Drip tray (standard)	33 2254 9000	all
1	Pcs	Drip tray (when using an integrated or under-counter cooler)	33 2254 9200	all
1	Pcs	Drip grid	33 2465 8000	all
1	Pcs	Cup stop	33 9394 2200	all
Customer Check-up kit				
1	Pcs	Customer Check-up kit	33 2861 7000	all
Scale filter/water filter				
1	Pcs	Water filter Bestmax M (complete set)	03 9331 0001	all
1	Pcs	Spare cartridge for water filter	33 2426 5000	all
Order numbers for the WMF care program				
1	bottle	WMF Special cleaner for milk foamer	33 0683 6000	all
1	pack	Special cleaning tablets (100 pieces)	33 2332 4000	all
1	Pcs	Pipe cleaner	33 0350 0000	all
1	Pcs	Cleaning brush	33 1521 9000	all
1	tube	Gasket grease 5 grams	33 2179 9000	all

Index

A

Access control 32
Accessories and spare parts 64
Accounting level 33
Accounting numbers of beverages 34

B

Barista pad 16, 18, 30
Bean hopper 7
Bean hopper cleaning 42
Beverage buttons 26
Beverage dispensing 10
Brewing unit cleaning 39
Brewing unit error 49
Brew time 19
Button allocation 28

C

Call up the main menu 8
Capacity 29
Care 18, 24, 36
Care message 16
Change recipes 27
Choc hopper 7
Choc powder quantity 27
Cleaning instructions 60
Cleaning intervals overview 36
Cleaning level 32
Cleaning metal surfaces 38
Cleaning program 24, 37
Cleaning schedule 44
Coffee grounds quantity 27
Coffee machine maintenance 46
Combi spout cleaning 38
Conditions for usage and installation 61
Connect up the milk 11
Cooler adapter 11
Cool milk 11, 45
Copy day 22
Cup&Cool 11
Cup volumes 27

D

Daily cleaning 37
Day counter 34
Delete counter 34
Delete PIN 34
Delete timer 23
Diagnostics program 51
Dispense milk or milk foam 10
Display contrast 29
Display language 29
Display switching times 22
Drip tray 15
Drip tray, housing and front panel 38
Duties of the owner/operator 58

E

Electrical connection 62
Empty grounds container 48
Empty milk message 32
Error message 16, 51
Error messages 51
Error messages and malfunctions 54
Error number 49, 51

F

Filter change 25, 43
Foamer cleaning 24
Foamer rinsing 30

G

Glossary 8
Grounds container cleaning 38
Grounds container missing 48

H

HACCP schedule 44
Hazards to the coffee machine 56

I

Information 16, 18
Introduction 6

J

Journal 19

L

Labelling of beverage buttons 35
Latte macchiato 20
Latte macchiato pause interval 20

M

Main menu 16, 20
Main menu functions (pads) 17
Maintenance 46
Malfunctions 51
Manual insert 13
Mechanical settings 35
Menu control pads 17
Menu pad 31
Messages and instructions 48
Milk and foam 20
Milk container 38
Milk foam dispensing 10
Milk foam quality 20
Milk foam volume 27
Milk nozzle 11
Milk system rinsing Standard 38
Milk volume 27
Mixer cleaning 41
Mixer rinsing 25, 38
Multitool 35

N

No warranty is provided 59

O

On/Off switch 30
Open water supply valve 49
Operating options 30
Operation 10
Original WMF spare parts 59
Other settings 35

P

Parts of the coffee machine 6
PIN entry 32
PIN rights 32
Preparation of coffee grounds using the manual insert 13

Q

Quality 27

R

Read counter 34
Ready to operate 16, 18
"Ready to operate" display pads 16
Recipe and buttons 26
Recommendation for Choc and Topping 45
Refill beans 48
Regular cleaning 42
Reset 28
Rinse filter 25
Rinsing interval 30

S

Safety devices 55
Sanitize milk system 44
SB mode 31
Scale filter is fitted 29
Second level 30
Self-service 30, 31
Service 18

Set grinding degree 35
Set timer 21
Setting level 33
Settings 26
Software 16
Steam boiler temperature 28
Switching off 15
Switch off time 21, 22
Switch on coffee machine 10
Switch on time 21, 22

T

Tablet insert 7
Technical data 61
Time and date 29
Timer 19, 21
Timer information 23
Timer overview 22
Timer program 21
Timer state 21
Toggle pad 30
Topping hopper 7
To the main menu 19
Touch-screen display 7
Twin Topping 9
Twin Topping hopper 7, 12

U

User Manual Signs and Symbols 8
User Manual Symbols 8

W

"Warm rinse" pad 18, 30
Warm rinsing 16
Warm-up rinsing 29
Warranty claims 59
Water filter 25, 43, 46, 59
Water filter rinsing 25
Water hardness 29
Weekly cleaning 39
Weigh grounds 28
WMF Customer Service 47



Your nearest WMF Service:

© 2011 WMF AG

All rights reserved, in particular duplication, distribution and translation rights.
No part of this manual may be reproduced in any form or processed, duplicated or distributed using electronic systems without written consent.

Design and production/typesetting and print presentation:
TecDoc GmbH; Geislingen, info@tecdocgmbh.de

Original User Manual. Printed in Germany.

We reserve the right to make technical modifications.

22.06.2011

I800S